



### Removal

---

- 1 Remove optional switch.
- 2 Remove cover for optional switch.
- 3 Pull off vacuum lines from switchover valve (13, 14, 15, 17, 18), check color code of vacuum lines first and mark, if required.

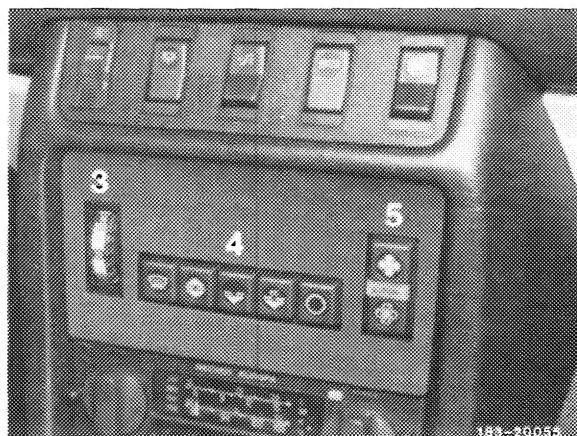

- 4 Pull off electric coupling (2-point) and unscrew switchover valve from holder on air conditioner housing.

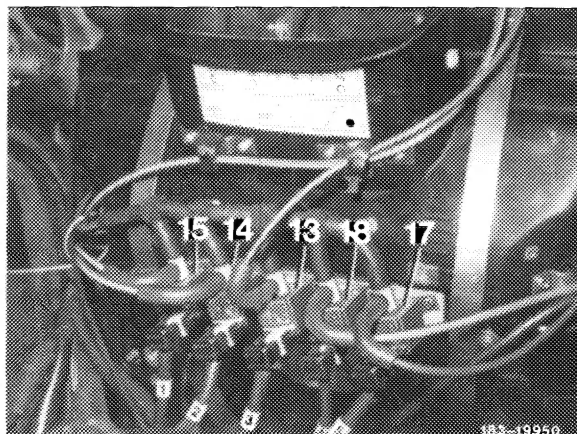

Switchover valves for  
13 Center nozzle flap  
14 Legroom flap  
15 Defroster nozzle flap  
17 Main air flap  
18 Fresh air-recirculating air flap

### Installation

---

- 5 Check switchover valves (83-628).
- 6 For installation proceed vice versa while paying attention to electric wiring diagrams and vacuum circuit diagrams.
- 7 Check automatic climate control for function.